

**PHOTO** *Tex*<sup>TM</sup>

# **INSTALL SUGGESTIONS**

**WALL PAINTS, PRIMERS & ADDED  
ASSURANCE ON VARIOUS WALLS**







# SUGGESTIONS

With the new trend in paint additives (*anti-microbial, anti-stain, anti-mold*) and the recommended wait of 30 days on a newly painted wall, we have gathered a few short-cuts and added protection, *as needed*, at your discretion.



Installers like to secure the top of large panels by priming a border at the top of the wall and continue the border a bit down the sides.



**Suggestion: Pour on plate and use sponge, as squeezing the bottle can get messy.**



# PRIMERS

\*Installers suggest the below primers that enhance the adhesive tack.



**\*24 hour dry time with slight tack.**



**\*Strong tack. Use light coat and apply wet.**




**If not painting on drywall, use suggested primer.**





**Behr Premium Plus  
Interior Flat  
Paint & Primer**

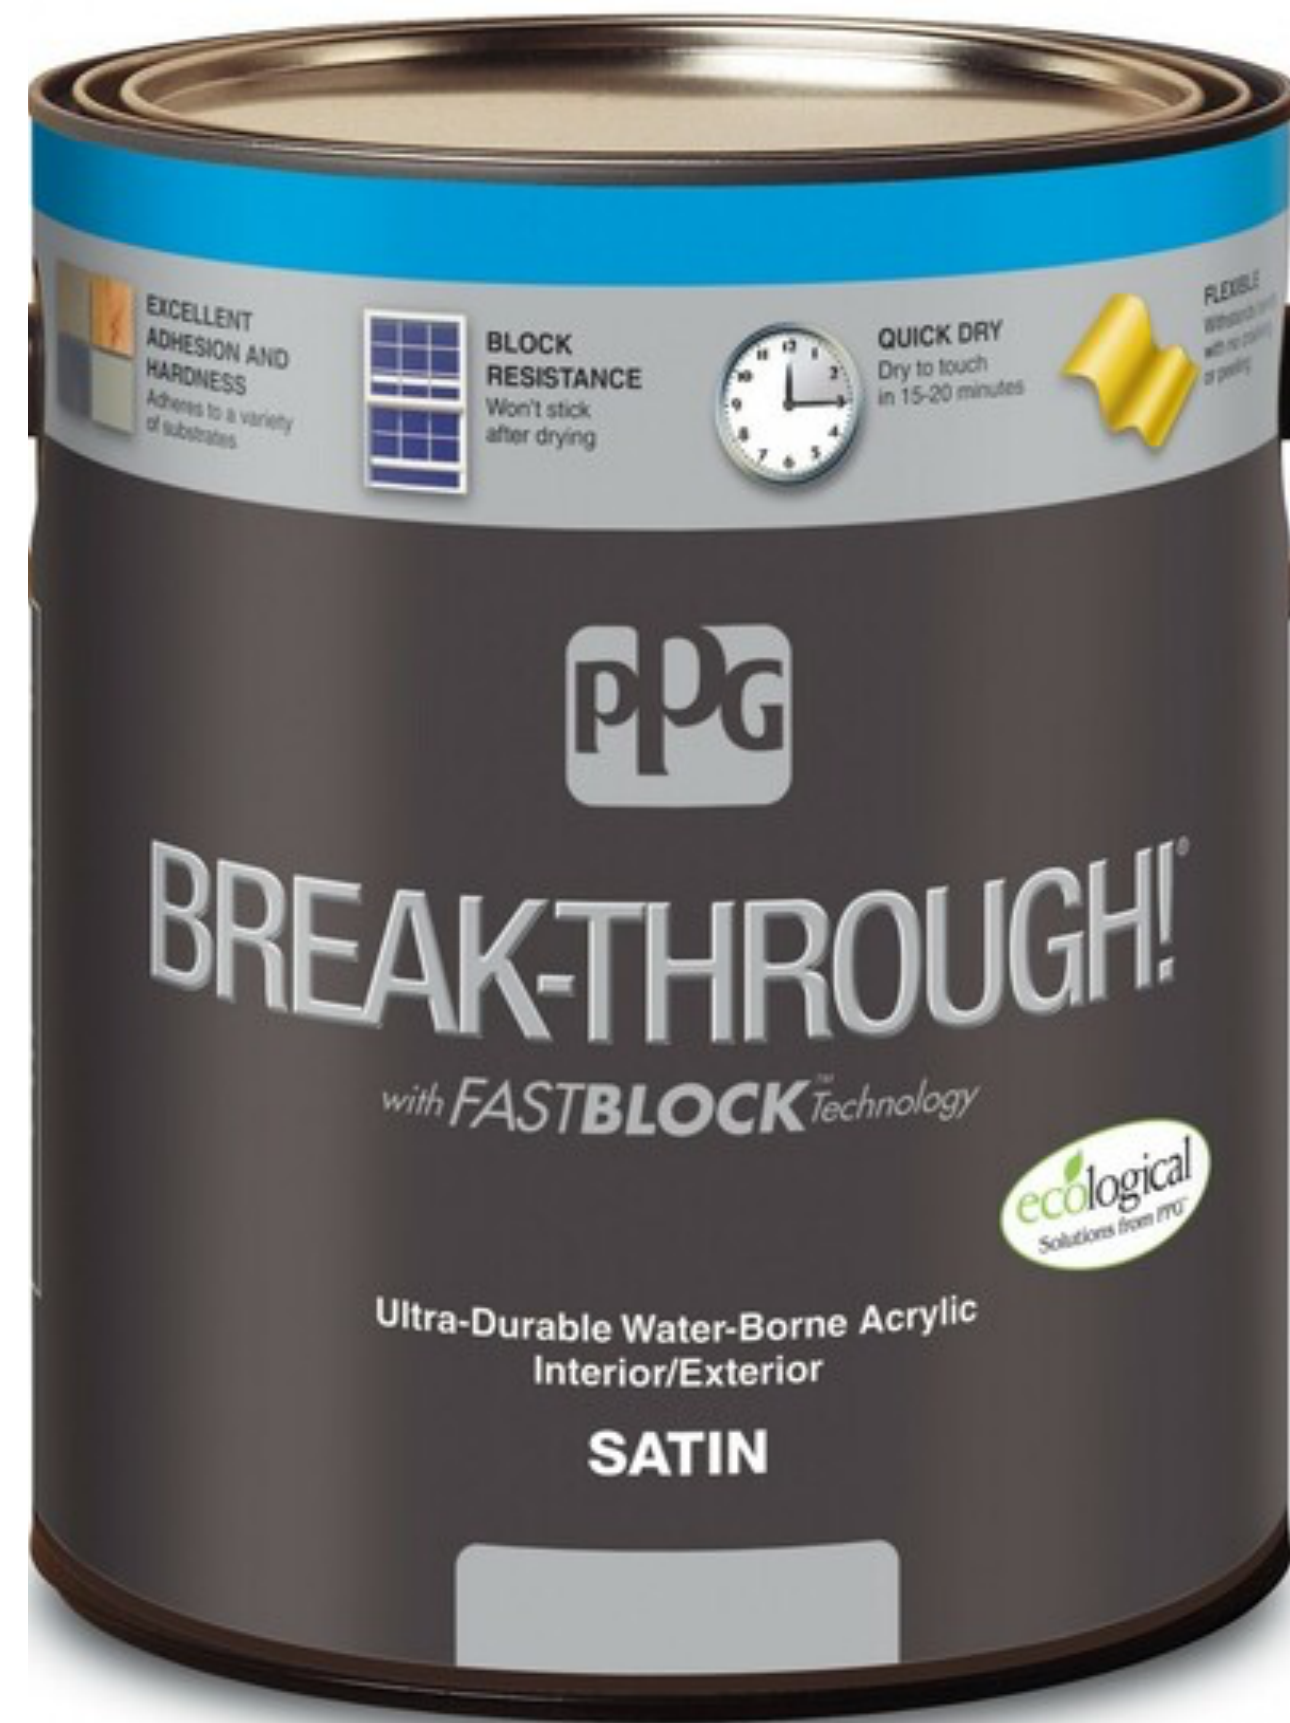

**Break-Through! V51-V  
Satin Clear**

# PAINT & PRIMER.

Need to paint the wall and cannot wait 30 days? With these, you will only need to wait about 7 days.